


 
Installation the alternator method

1. Prepare the rotor and stator, like the picture.



2. Be careful: Hold the top of the shaft and align to the hole of the stator, then slowly close to the stator, the stator will be attracted to the rotor automatically.

DANGER: hands or other tools can not close to rotor, because the power of the rotor's magnet is very big, if do not according to the instruction operation, it will injure your hand or damage the alternator.

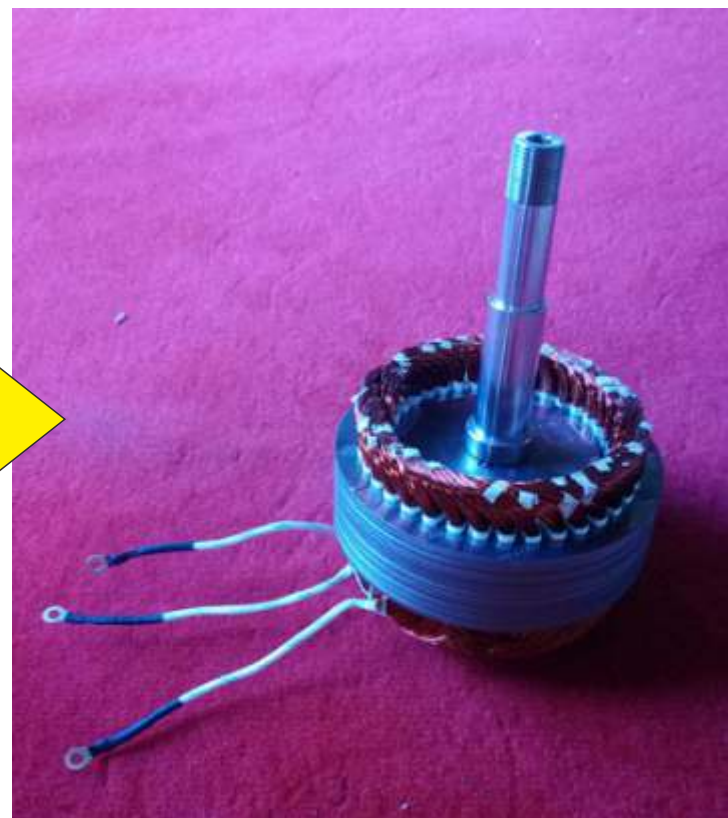

3. Prepare the alternator front and back cover, like the picture.



4. Install the front cover and back cover.



5. Tighten the 4pcs screws, and make sure the rotor in balance condition, under this condition, turn the shaft by hand, the shaft can rotate smoothly.



6. Finish.

